
## **Elite**

# Fabric Door Canopy

Elite Fabric Door Canopy Installed



It is our recommendation that you read instructions carefully prior to assembly and installation

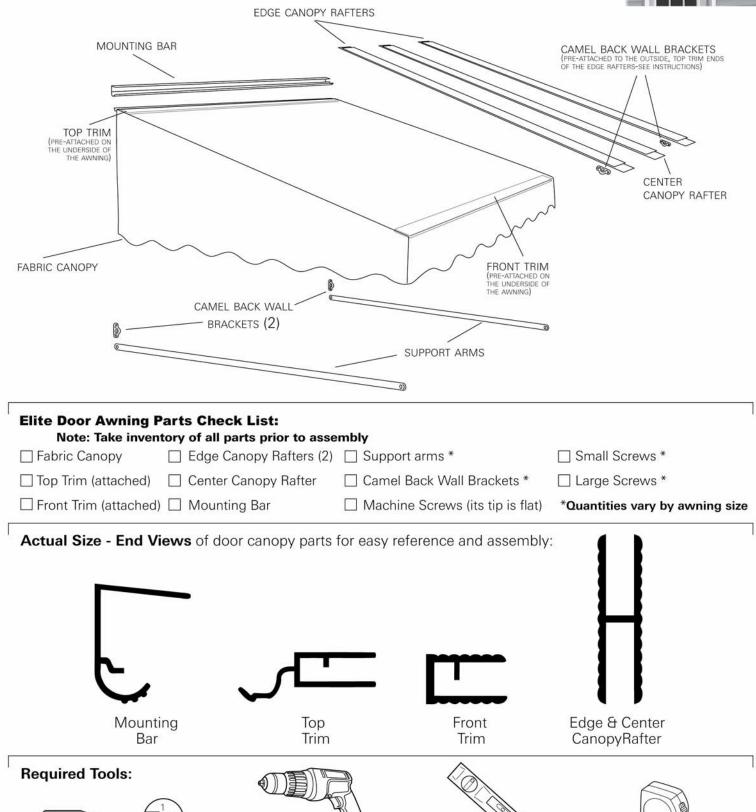

Phillips, Regular & Hex head Screw Drivers or Bits

Power Drill

Level

Tape Measure


### **Assembly Instructions**

### The Elite Fabric Door Canopy

1

Hardware Pack

Canopy Pack




The 2700 Door Canopy is packaged with the hardware & instructions in one plastic bag and the canopy along with the Mounting Bar rolled inside the Canopy in the other plastic bag.

2

Front Trim

Mounting Bar

Top Trim

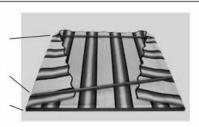

The Canopy will come rolled with the underside rolled to the inside. Unroll and lay the awning out on a *clean dry surface*. The awning will be assembled from this position, **upside down**. The **Mounting Bar**, rolled inside the Canopy, will be used in Step 1 of the installation instructions, set it aside for now.

**Note:** For your conveinence the **Front Trim** and the **Top Trim** are already attached to the front and back of your canopy.

3

Support Arm

Camel Back Wall Bracket

Edge Canopy Rafter



Begin by attaching one end of one of the **Support Arms** to the **Edge Canopy Rafter** by inserting it into the Camel Back Wall Bracket that is already mounted on the Edge Canopy Rafter using a machine screw.

**Note:** Insert the machine screws through the **Camel Back Wall Bracket** and the Support Arms from the *outside in* toward the Canopy.

4

Support Arm w/ Camel Back Wall Bracket

> Edge Canopy Rafter

> > Front Trim



Attach one **Edge Canopy Rafter** to the **Front Trim** using small screws in pre-punched holes - the Front Trim is behind the Valance on the inside of the Canopy and is pre-attached.

**Note:** Be sure to position the Edge Canopy Rafters so that the ends with the attached Camel Back Wall Bracket / Support Arm is toward the outside and at the front of the Canopy (Front Trim).

5


Front Trim

Edge Canopy Rafter



Attach the other end of the **Edge Canopy Rafter** to the **Top Trim** on both sides using two small screws in pre-punched holes.


Repeat steps 3,4 & 5 for the second Support Arm and secure the other Edge Canopy Rafter on the other side of the Canopy.

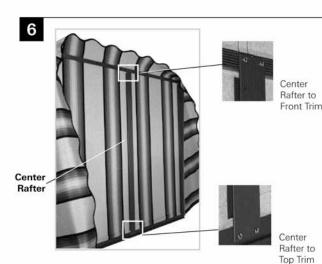


Position the **Center Rafter** in the center of the Canopy and align with pre-punched holes at the front trim & the top trim. Then, fasten the Center Rafter to the **Front Trim 1st** and then the **Top Trim** with two small screws at each end. (as shown in Step 6 details)

**Picture Inserts:** The Fabric Canopy is turned vertically to show placement of Center Rafter with attachment details to the Front Trim & Top Trim.

#### The 2700 Series Door Canopy is now ready for installation.



#### Installation Instructions

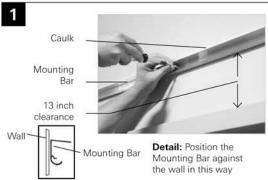

Install Mounting Bar with large screws 13" above the door.


Be sure the bar is level and centered over the door opening. Screws must be in studs or heavy sheathing.

(Drill alternate holes in bar if necessary)

Please refer to Step 1 detail to place the Mounting Bar correctly on the wall.



Caulk the top of the mounting bar against the house.

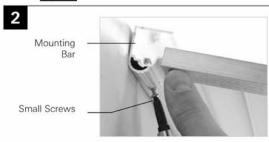

Flip the Canopy over to its installed position (as shown above) then lift the Canopy up and angle the Top Trim insert into the Mounting Bar and let it down slowly. It will rest here locked in place while you secure it. (please refer to Step 2 Detail for cross section diagram)

Secure the Mounting Bar & the Top Trim together with small screws in pre-punched holes from underneath.




Apply a bead of caulking in the trough of the mounting bar prior to the awning's top trim placement into the mounting bar.





(Front) - Awning Frame Views - (Side)

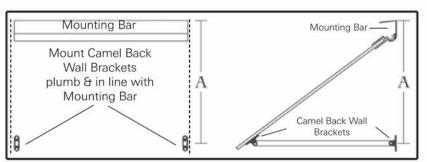

Attach the (2) two loose Camel Back Wall Brackets, temporarily, to the other end of the Support Arms using a machine screws.

Before securing Support Arms with Camel Back Wall Brackets to your house please refer to the mounting chart here for model number and correct mounting points for your Awning.

Note: Mounting dimension 'A' is measured from the top of the Mounting Bar to the center of the Camel Back Wall Bracket -shown at left.

C	OOR CANOR	Y MOUN	TING CHAR	г	4
MODEL NUMBER	4	5	6	7	8
MOUNTING POINT	7 1/2"	9"	10 1/2"	12"	13 1/2"

Now attach mounting brackets to the house using large screws making sure the Camel Back Wall Brackets are secured in solid sheathing at the proper points from the reference chart.






After Camel Back Wall Brackets have been secured to the house, remove the machine screws and re-insert them through grommeted tabs on your awning to secure the Canopy sides and screw them back into the camel back wall brackets.

Installation is now complete.

## Additional Instructions for Oversized Awning/Canopy

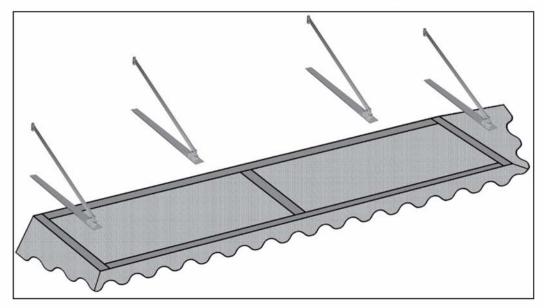

#### Oversized awning above is shown 'UP-SIDE DOWN' to illustrate additional support arm placement

1

Custom oversized Awnings are generally the same as in-stock Awnings. The instructions will be mostly the same except for added Support Arm Sets to carry the weight evenly over the width of the Awning.

Additional Center Rafters, Camel Back Wall Brackets and Support Arm Sets have been supplied.

Please refer to assembly instructions (Steps 3,4 & 5) in this booklet, if necessary, to assemble these additional Center Rafter/Mounting Bracket/Support Arm Sets.

The appropriately sized Mounting Bar has also been supplied, please refer to installation instructions in this booklet (Steps 1 & 2) for proper installation of the Mounting Bar. Follow all other instructions for assembly and installation.

#### Limited warranty information

Awnings and Canopies are manufactured under the highest standards of production, after comprehensive research and development, and will be warranted by the manufacturer to the original purchaser from date of purchase for a period of Five (5) years against the occurrence of manufacturing defects directly resulting in peeling, flaking, blistering or rusting under conditions of normal use and service, subject to the terms and conditions contained in this Limited Warranty.

The manufacturer does not warrant installation nor defects caused by installation. This Limited Warranty does not cover any other defects as specified herein. This Limited Warranty does not cover any other damage or material failure resulting from, but not limited to, normal weathering, oxidation, accidental damage or intentional damage, fire or flood, windblown objects, windstorm, sleet or chemical pollutants, mildew or structural defects, negligent maintenance or misuse or abuse, or any other causes or occurrences beyond the control of the manufacturer.

Normal weathering may cause any surface to oxidize, chalk, gradually fade or accumulate surface dirt or stains due to varying exposures to sunlight, weather or atmospheric conditions. The geographic location, the quality of the atmosphere and other local factors in the area, over which the manufacturer has no control, contribute to the severity of these conditions.

This Limited Warranty is void if incompatible accessory products are installed which cause defects to occur.

The provisions of this Limited Warranty are the full and complete warranty policy extended by the manufacturer.

This Limited Warranty shall be null and void if harmful cleaning compounds are used.

THE WARRANTY STATEMENTS CONTAINED IN THIS LIMITED WARRANTY SET FORTH THE ONLY EXPRESS WARRANTIES EXTENDED BY THE MANUFACTURER IN LIEU OF ALL OTHER WARRANTIES, AND THE PROVISIONS OF THIS LIMITED WARRANTY SHALL CONSTITUTE THE ENTIRE LIABILITY OF THE MANUFACTURER AND THE PROPERTY OWNER'S EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THE MANUFACTURER SHALL NOT BE LIABLE TO THE PROPERTY OWNER FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequencial damages, so the above limitations or exclusions may not apply to you. This Warranty gives you the specific legal rights and you may also have other rights, which vary from state to state.